


# HAMMER

*Watches*

INSTRUCTION MANUAL

# HAMMER

## TIME SETTING FUNCTION FOR 2 AND 3 HAND

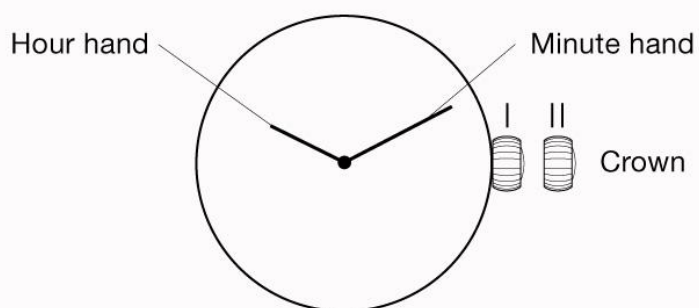


### **SETTING THE TIME**

1. Pull crown out to position II (the watch stops).
2. Turn crown (clockwise direction) until you reach the correct time.
3. Push crown back to position I.

# HAMMER

## 3 HANDS DATE MOVEMENT / SUB SECOND

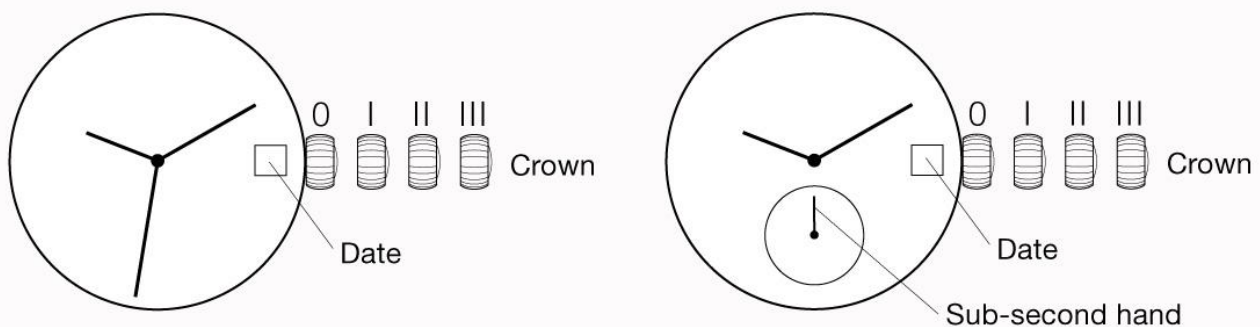

### SETTING THE TIME

1. If crown is screwed down, unscrew crown to position I.
2. Pull crown out to position III, the watch stops.
3. Turn crown clockwise (or anti-clockwise for models with sub-second dial) until you reach the correct time.
4. Push crown back to position I and, if necessary, screw crown until it stops moving (position 0).


### SETTING THE DATE

1. Unscrew crown to position I.
2. Pull crown out to position II, the watch continues to run.
3. Turn crown clockwise until you reach the correct date.
4. Push crown back to position I and screw crown until it stops moving (position 0).

Do not change the date between 10pm and 2am. This is when the movement is in position to carry out the automatic date change, any interference may cause damage to the movement.

# HAMMER

## CHRONOGRAPH MOVEMENT

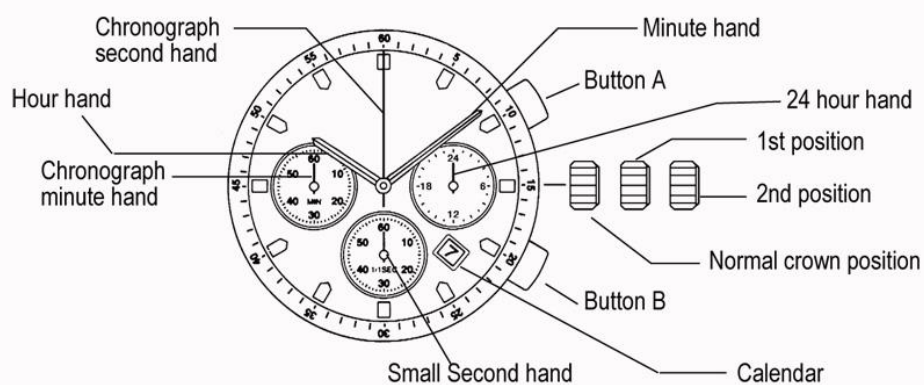

### SETTING THE TIME

1. Pull the crown out to the 2nd position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, small second hand begins to run.

### SETTING THE DATE

1. Pull the crown out to the 1st position.
2. Turn the crown counter-clockwise to set the date.  
\*If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change on the following day.
3. After the date has been set, push the crown back to the normal position.

# HAMMER

## CHRONOGRAPH MOVEMENT

### USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/1 second united up to maximum of 59 minutes 59 seconds.

The chronograph second hand keeps continuously for 59 minutes 59 seconds after starting.

Measuring time with the chronograph

1. The chronograph can be started and stopped each time button "A" is pressed.
2. Pressing button "B" resets the chronograph and the chronograph second hand and chronograph minute hand return to zero position.



### CHRONOGRAPH RESET (INCL. AFTER REPLACING BATTERY)


This procedure should be performed when the chronograph second hand does not return to zero position after the chronograph has been reset, and including after the battery has been replaced.

1. Pull the crown out to the 2nd position.
2. Press button "A" to set the chronograph second hand to the zero position. The chronograph hand can be advanced rapidly by continuously pressing button "A".
3. Once the hand have been zeroed, return the crown to the normal position.

\* Do not push crown to normal position while the chronograph second hand returns to zero position. It stops on the way when crown are returned to normal position and its position is recognized as zero position.

# HAMMER

## AUTOMATIC 3 HANDS DATE MOVEMENT

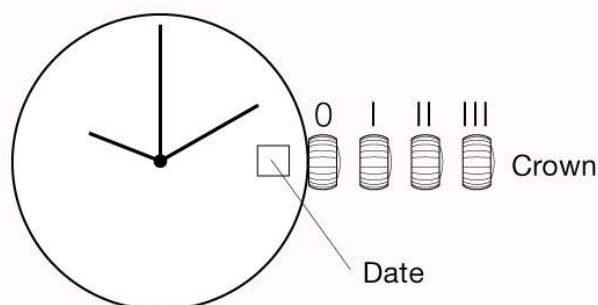

### WINDING

1. If crown is screwed down, unscrew crown to position I.
2. Turn crown clockwise approximately 30 times.
3. If necessary, screw crown in until it stops moving (position 0).  
This will power the mainspring of your watch. The mainspring will be automatically wound by your natural arm movements while you wear it on your wrist. The watch has a power reserve of approximately 38 hours.

### SETTING THE TIME

1. If crown is screwed down, unscrew crown to position I.
2. Pull crown out to position III, the watch stops.
3. Turn crown clockwise until you reach the correct time.
4. Push crown back to position I and, if necessary, screw crown until it stops moving (position 0).

### SETTING THE DATE

1. If crown is screwed down, unscrew crown to position I.
2. Pull crown out to position II, the watch continues to run.
3. Turn crown clockwise until you reach the correct date.
4. Push crown back to position I and, if necessary, screw crown until it stops moving (position 0).

Do not change the date between 10pm and 2am. This is when the movement is in position to carry out the automatic date change, any interference may cause damage to the movement.

# HAMMER

## WATER RESISTANCE

All HAMMER watches are designed with a minimum water resistance rating of 3ATM (100ft/30m).

The water resistance of a watch protects the movement from dust, moisture, and risk of damage should it be immersed in water.

Please see chart guidelines for recommended exposure of various water ratings.





It is important not to adjust the position of the crown while the watch is in contact with water. Water can enter the case and cause damage.

For watches with screw crowns, ensure the crown is completely locked in its correct position before contact with water.

For watches with chronograph functions, do not engage the chronograph under water, as water may leak in the case and cause damage.

# HAMMER

## WATER RESISTANCE

Water Resistance		Water-Related Use			
Case back marking	Depth	 Washing hands	 Showering, bathing	 Swimming, snorkeling	 Scuba diving
3 ATM	3 Bar, 30 Meters	✓	X	X	X
5 ATM	5 Bar, 50 Meters	✓	✓	X	X
10 ATM	10 Bar, 100 Meters	✓	✓	✓	X
20 ATM	20 Bar, 200 Meters	✓	✓	✓	✓

Always set crown in the normal position. Screw crown until it stops moving completely.



# HAMMER

## CARE AND PRECAUTIONS

### **CARE**

Clean your watch with a soft cloth and water only. Do not submerge it. After contact with saltwater, rinse your watch clean and dry with a soft cloth. In order to maintain metal bracelets, we recommend cleaning periodically. Dip a soft brush in warm soapy water and gently rub the bracelet clean. We advise having your watch serviced every 18-24 months to ensure longevity and seamless operation.

### **PRECAUTIONS**

It is important to avoid the following conditions: extreme heat or cold, prolonged periods of exposure to direct sunlight, exposure to wet conditions that exceed your watch's water rating (see case back and chart). Never operate any of the function buttons or adjust the position of the crown when the watch is in contact with water.

Your watch should not be affected by magnetic fields generated by household items such as televisions. Avoidance of other strong electric fields or static electricity is advised. It is also important to avoid extreme shock or impact as your watch is designed to withstand impact under normal use.